


# Procedimento para ativar o Phone Book Manager Server

Através web browser entrar no endereço ip do DVG:

<http://192.168.8.254/>

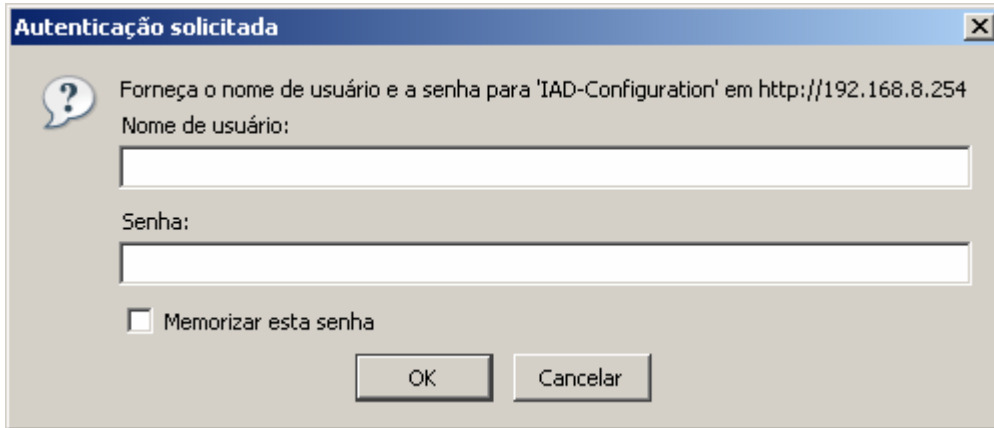

Autenticação solicitada

Forneça o nome de usuário e a senha para 'IAD-Configuration' em http://192.168.8.254

Nome de usuário:

Senha:

Memorizar esta senha

OK Cancelar


Entrar com usuário e senha para acesso as configurações.

**OBS: Não utilizar o Internet Explorer 7.0 pois a segurança desse browser impede a validação da senha, indicamos o uso da versão 6.0 ou do Firefox.**

## Configuração do DVG Server:


Entrar no menu **Network Settings**:

- Habilitar o **Phone Book Manager Server**.
- Habilitar o compartilhamento do Phone Book com os Clients.
- Indicar o Gateway Name e a Password para acesso ao Servidor.

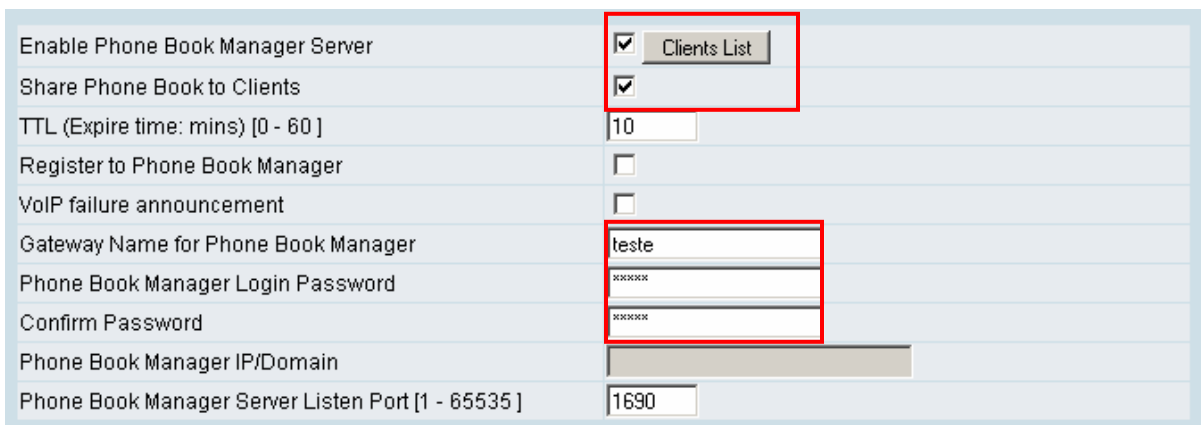

Enable Phone Book Manager Server	<input checked="" type="checkbox"/> Clients List
Share Phone Book to Clients	<input checked="" type="checkbox"/>
TTL (Expire time: mins) [0 - 60]	<input type="text" value="10"/>
Register to Phone Book Manager	<input type="checkbox"/>
VoIP failure announcement	<input type="checkbox"/>
Gateway Name for Phone Book Manager	<input type="text" value="teste"/>
Phone Book Manager Login Password	<input type="password" value="*****"/>
Confirm Password	<input type="password" value="*****"/>
Phone Book Manager IP/Domain	<input type="text"/>
Phone Book Manager Server Listen Port [1 - 65535]	<input type="text" value="1690"/>

Acessar o Phone Book para sejam cadastrados todo os ramais dos respectivos DVG's Clients e **inclusive os ramais do próprio servidor.**

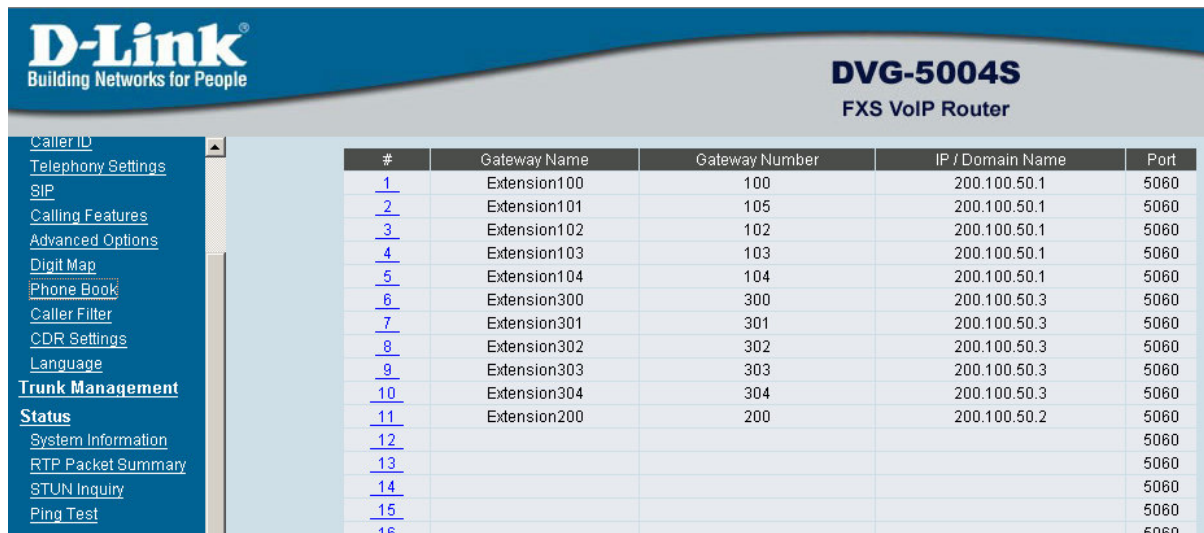


#	Gateway Name	Gateway Number	IP / Domain Name	Port
<a href="#">1</a>	Extension100	100	200.100.50.1	5060
<a href="#">2</a>	Extension101	105	200.100.50.1	5060
<a href="#">3</a>	Extension102	102	200.100.50.1	5060
<a href="#">4</a>	Extension103	103	200.100.50.1	5060
<a href="#">5</a>	Extension104	104	200.100.50.1	5060
<a href="#">6</a>	Extension300	300	200.100.50.3	5060
<a href="#">7</a>	Extension301	301	200.100.50.3	5060
<a href="#">8</a>	Extension302	302	200.100.50.3	5060
<a href="#">9</a>	Extension303	303	200.100.50.3	5060
<a href="#">10</a>	Extension304	304	200.100.50.3	5060
<a href="#">11</a>	Extension200	200	200.100.50.2	5060
<a href="#">12</a>				5060
<a href="#">13</a>				5060
<a href="#">14</a>				5060
<a href="#">15</a>				5060
<a href="#">16</a>				5060

## Configuração dos DVG's Clients:

Entrar no menu **Network Settings**:

- Habilitar o **Register to Phone Book Manager**.
- Habilitar o **VoIP failure announcement**.
- Indicar o **Gateway Name e a Password** para acesso ao Servidor.
- Indicar o **IP do Servidor** ex: 200.100.50.2.

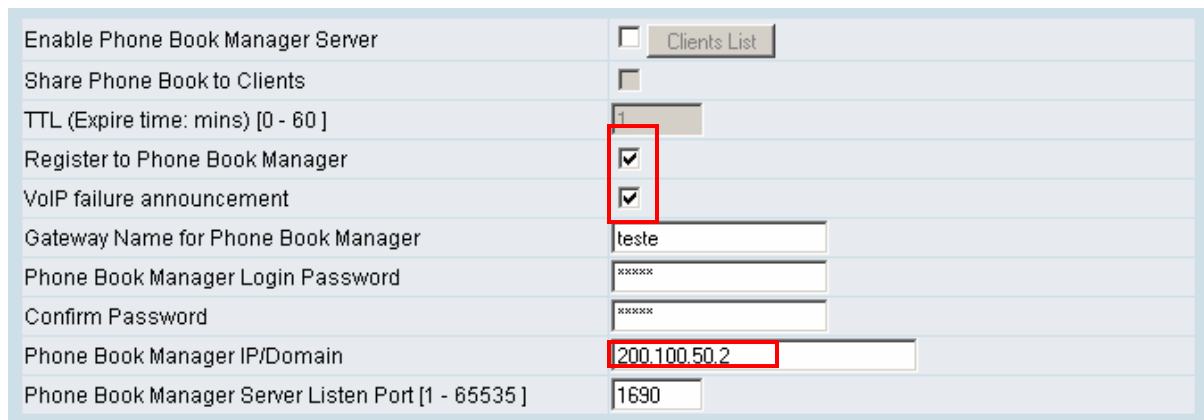

Enable Phone Book Manager Server	<input type="checkbox"/> Clients List
Share Phone Book to Clients	<input type="checkbox"/>
TTL (Expire time: mins) [0 - 60]	1
Register to Phone Book Manager	<input checked="" type="checkbox"/>
VoIP failure announcement	<input checked="" type="checkbox"/>
Gateway Name for Phone Book Manager	teste
Phone Book Manager Login Password	*****
Confirm Password	*****
Phone Book Manager IP/Domain	200.100.50.2
Phone Book Manager Server Listen Port [1 - 65535]	1690